Instruction Manual

BG01

DIOYANO ELECTRIC KETTLE

⚠WARNING

Please always read the instruction manual carefully before using.
KEEP THIS MANUAL.

IMPORTANT SAFEGUARDS

·Read all instructions before using.

·Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (underside the kettle & base) corresponds with the voltage in your home. If this is not the case, contact your dealer and do not use the kettle.

·Do not let the cord hang over the edge of a table or counter or touch a hot surface.

·Do not place on or near a hot gas or electric burner or in a heated oven.

·Do not operate the appliance without anything in it to avoid damaging the heat elements.

·Ensure that the kettle is used on a firm and flat surface out of reach of children, this will prevent the kettle from overturning and prevent damage or injury.

·To protect against a fire, electric shock or personal injury, do not immerse cord, electric plugs or kettle in water or other liquids.

·While water is boiling, or just after the water has finished boiling, avoid contact with steam from the spout.

·Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.

·Be careful when refilling when the kettle is hot.

·Close supervision is necessary when any appliance is used by or near children.

·Do not touch the hot surface. Use the handle or the button.

·The attached base can not be used for other than intended use

·During operation, wind the excessive cord into the inner of base on the purpose of making the distance between the base and outlet is the shortest.

·Extreme caution must be used when moving an appliance containing hot water.

·The appliance is not a toy. Do not let the children play it.

·The kettle is for household use only. Do not use outdoors.

·The use of accessory attachments, that are not recommended by the appliance manufacturer, may result in fire, electric shock or personal injury.

·Unplug the kettle from the outlet when not in use and before cleaning. Allow the kettle to cool before putting on or taking off parts, and before cleaning the appliance.

·To disconnect, turn any control to "off," then remove plug from wall outlet.

·If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

·This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well earthed.

·Do not use the appliance for other than intended use.

·The kettle can only use with the stand provided.

·If the kettle is overfilled, boiling water may spill out.

·This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

·Children should be supervised to ensure that they do not play with the appliance.

·This appliance is intended to be used in household and similar applications such as:

– staff kitchen areas in shops, offices and other working environments;

– farm houses;

– by clients in hotels, motels and other residential type environments;

– bed and breakfast type environments.

·Only the appropriate connector must be used.

·**WARING:** avoid spillage on the connector

·Please use a damp cloth to clean the surfaces in contact with food.

·WARNING: The heating element surface is subject to residual heat after use.

·Save these instructions.

DESCRIPTION

HOUSEHOLD USE ONLY

120V 60Hz 1500W 1.7L

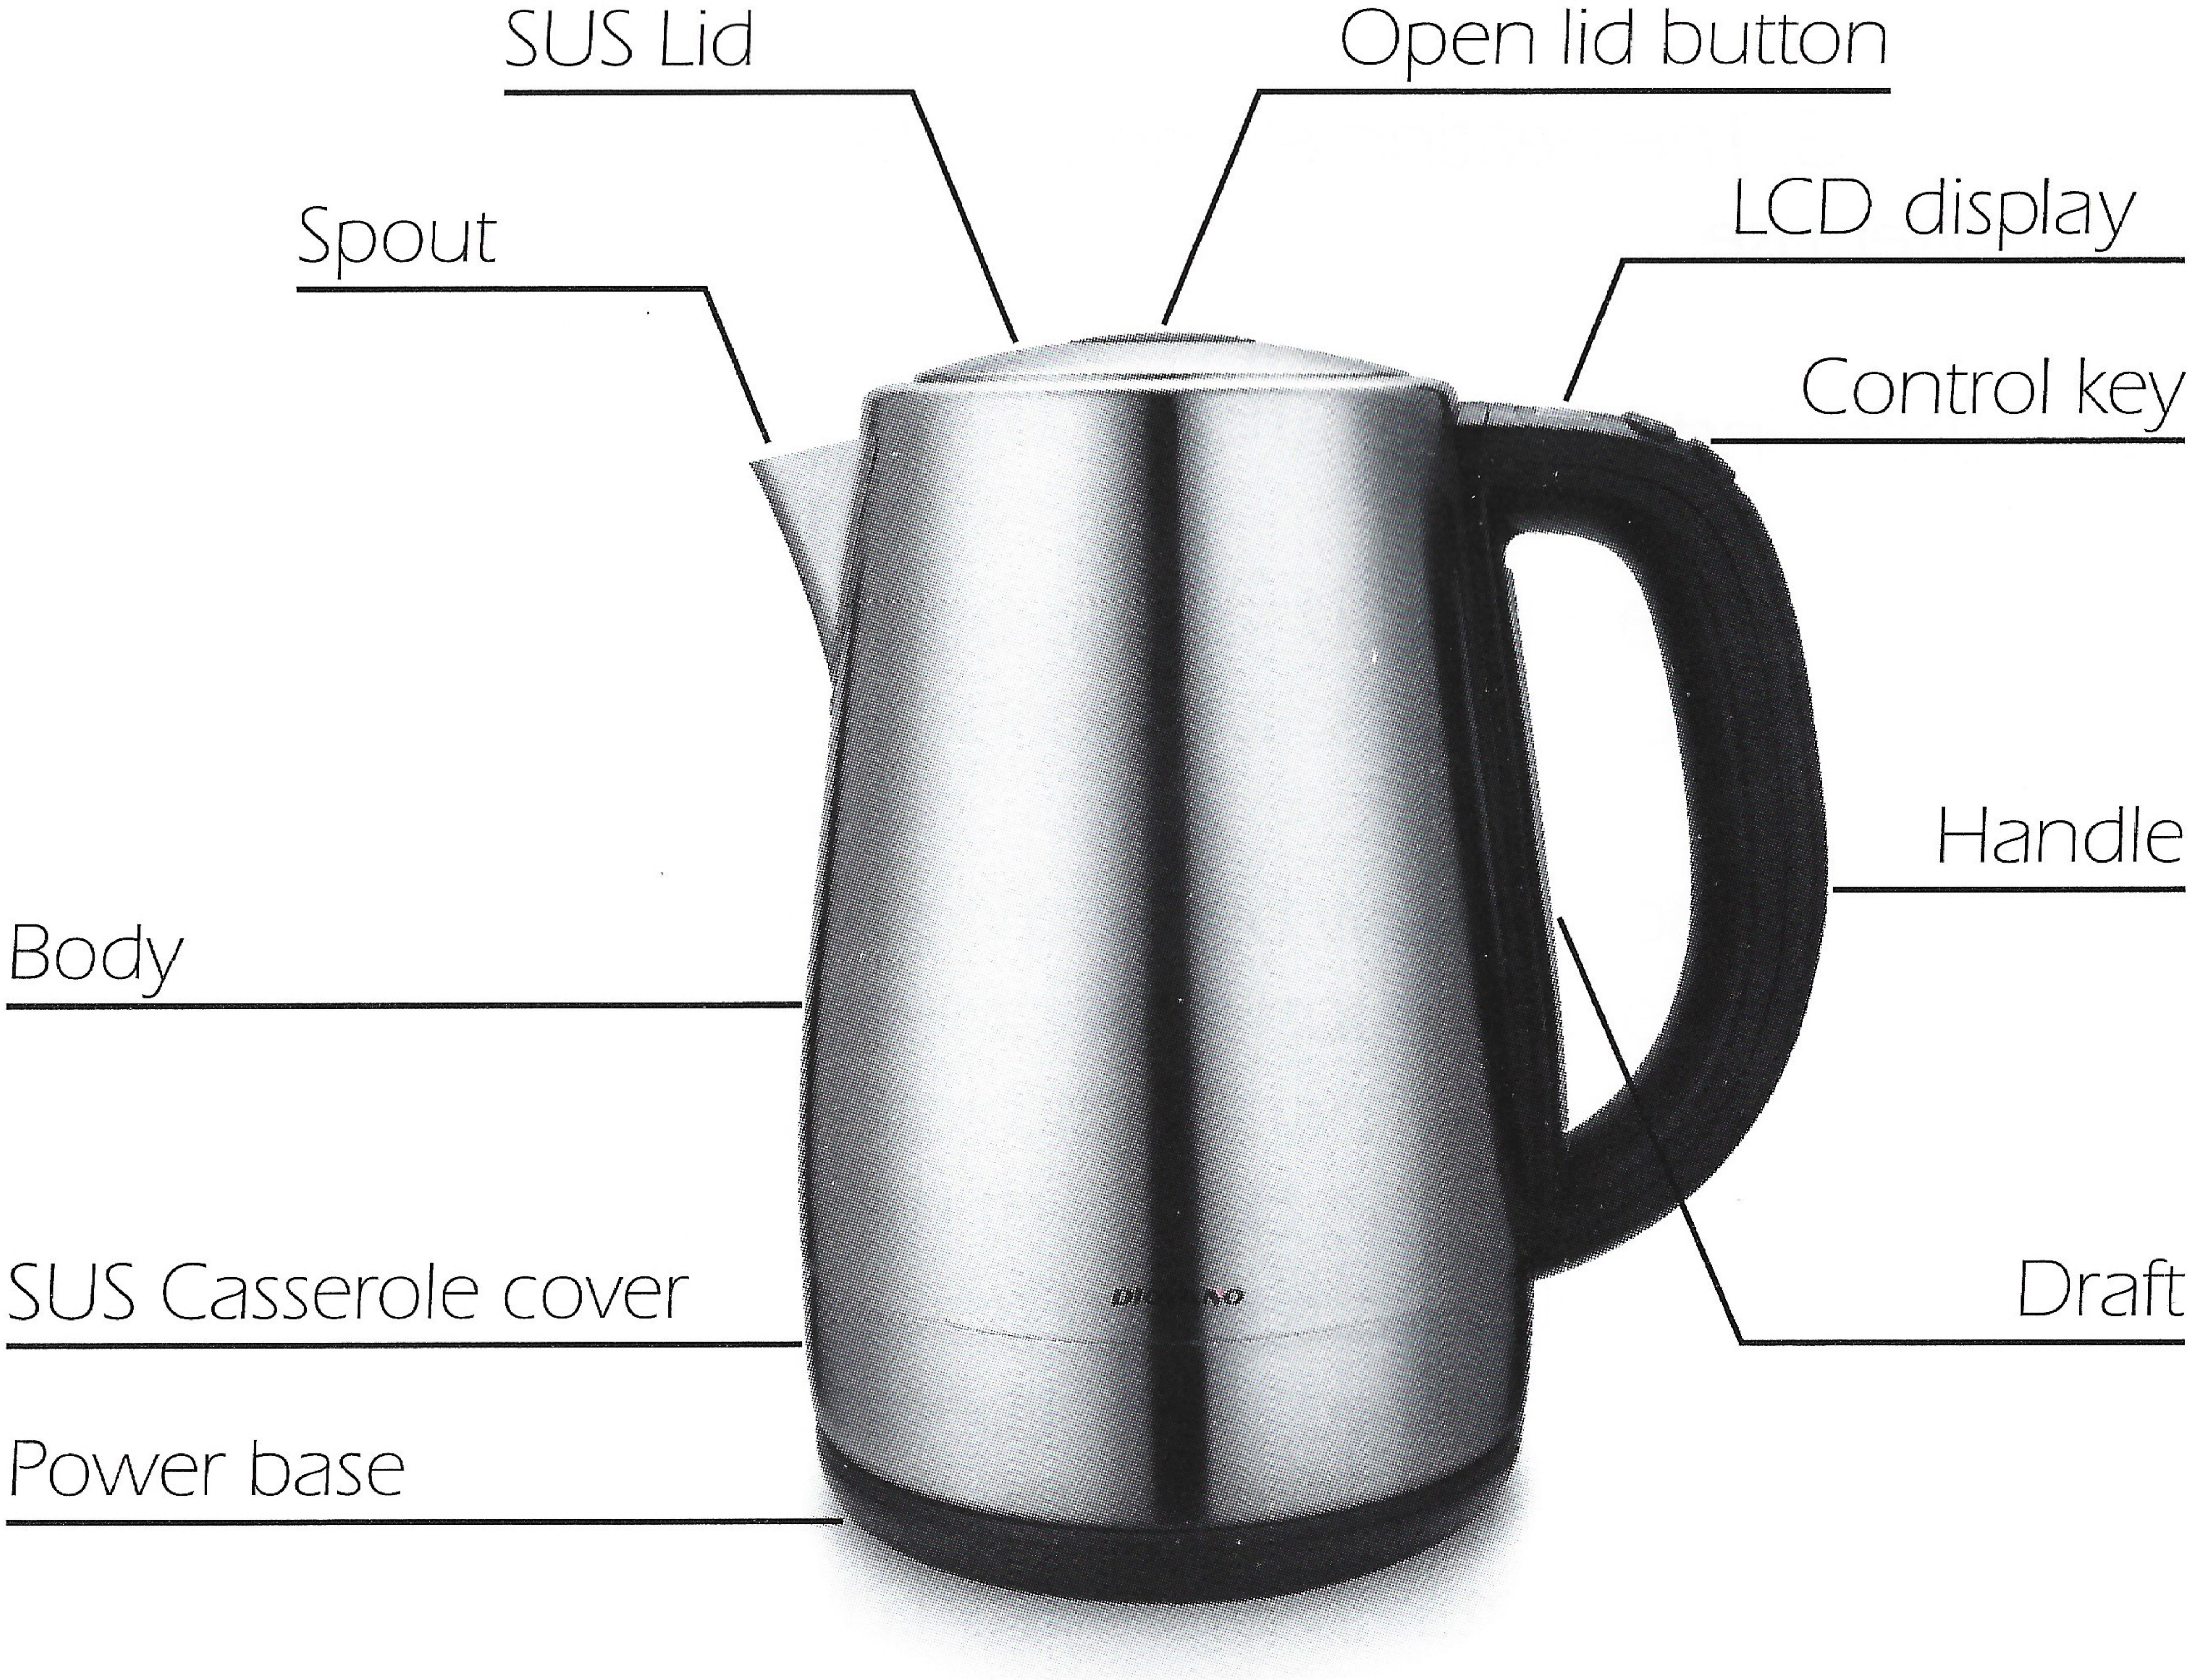
SUS Lid
Open lid button
Spout
LCD display
Control key
Handle
Body
SUS Casserole cover
Draft
Power base

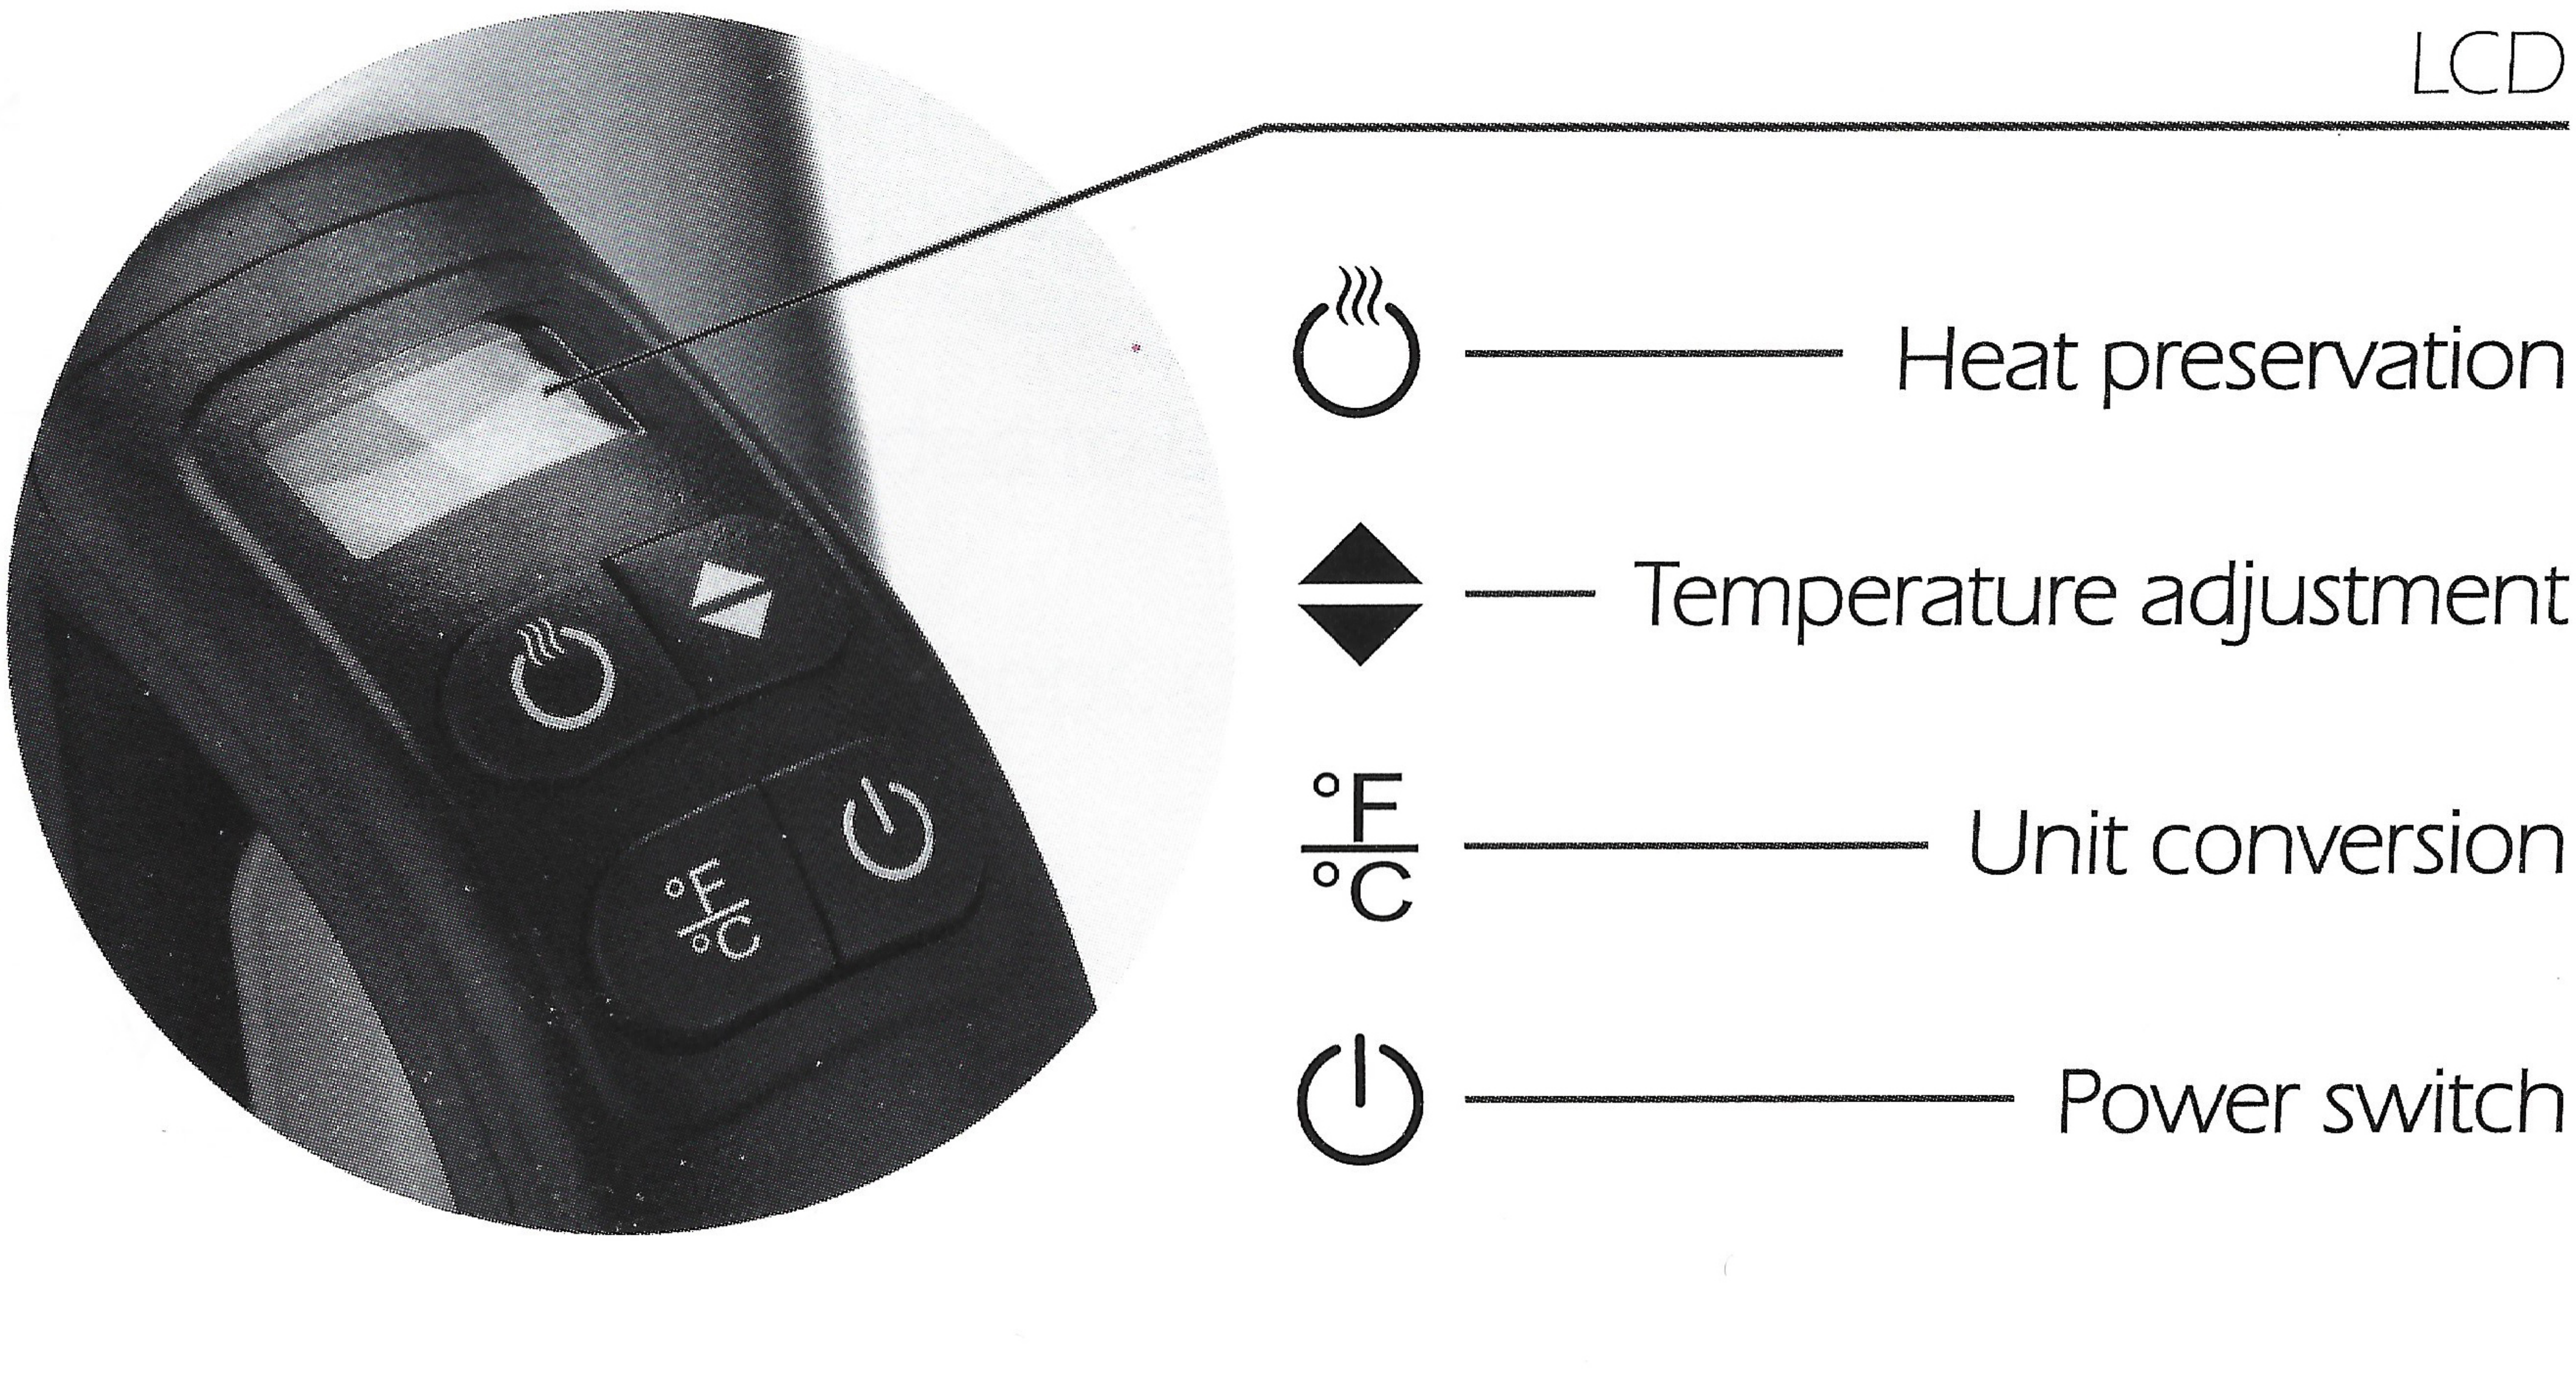
LCD
Heat preservation
Temperature adjustment
°F
°C
Unit conversion
Power switch

BEFORE USING YOUR KETTLE

If you are using the kettle for the first time, it is recommended that you should clean your kettle before use by boiling a full kettle of water twice and then discarding the water. Wipe the surface with a damp cloth.

NOTE: the max capacity of kettle is 1.7L.

OPERATION OF YOUR KETTLE

1. When filling the water into the kettle, please take it down from power base. Press the open lid button to open the lid, fill the water as you want and then close the lid. Also, you can fill the water through spout. The water level can't exceed the maximum water level or fall below the minimum water level.
2.Place the kettle onto the power base.
3.Put plug into the power outlet.
4.Boiling water: Press the power switch, the LCD will light up accompanied by flicker which means the kettle starts working. It boils to 100 °C by default. Meanwhile, you can also press the temperature adjustment button to set different boiling temperature (40, 50, 60, 70, 80, 90, 100). As it reaches the setting temperature, the LCD will light up for 10 seconds and then screen off.
5.Heat Preservation: Press the power switch, water will boil to the setting temperature (40, 50, 60, 70, 80, 90, 100). Then press the heat preservation button, LCD will always light on which means it is in heat preservation state. The kettle will heat automatically to the setting temperature while water temperature below the setting temperature. It can keep for 60 minutes and then screen off.
6.Unit Conversion: Press the unit conversion button, it can convert temperature between Centigrade and Fahrenheit grade.
7.Lift the kettle from power base and then pour water.

Note: Be careful when pouring boiling water, the hot water will cause scald.

BOIL-DRY PROTECT

Should you accidentally let the kettle operate without water, the boil-dry protection will automatically switch off the power. If this occurs, allow the kettle to cool before filling with cold water before re-boiling.

CLEANING AND MAINTENANCE

Always disconnect the appliance from the power outlet before cleaning.

1. Never immerse the kettle, power cord or power base in water, or allow moisture to contact with these parts.
2. Wipe the appearance of body with a wild and damp cloth or cleaner, never use a poisonous cleaner.
3. Remember to clean the filter at intervals. The filter can be detached for easier cleaning. When disassembling, make the spout toward users, you can see a tuber on the wall of housing, press the tuber with a little force, and then lift the filter. To attach, make the tuber on the bottom of filter be supported by the flange of spout, then push the filter towards the spout direction, the tuber on the top of filter will lock the wall of housing.

CAUTION: Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle to prevent the gloss loss.

REMOVAL OF LIMESCALE

Your kettle should be periodically descaled as the limescale in tap water may form scale on the bottom of kettle so as to cause the operation less efficiency. You can use the commercially available descaler and follow the instructions on the package of descaler. Alternatively, you may follow below instructions using the white vinegar.

1. Fill the kettle with 3 cups of white vinegar, then adding water to the amount so as to cover the bottom of kettle completely. Leave the solution in the kettle overnight.
2. Then discard the mixture in the kettle, then filling the kettle with clean water, boiling and then discard the water. Repeat several times until the odor of vinegar has been flushes away.

Any stains remaining inside the spout can be removed by rubbing with a damp cloth.

ENVIRONMENT FRIENDLY DISPOSAL

You can help protect the environment!
Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.

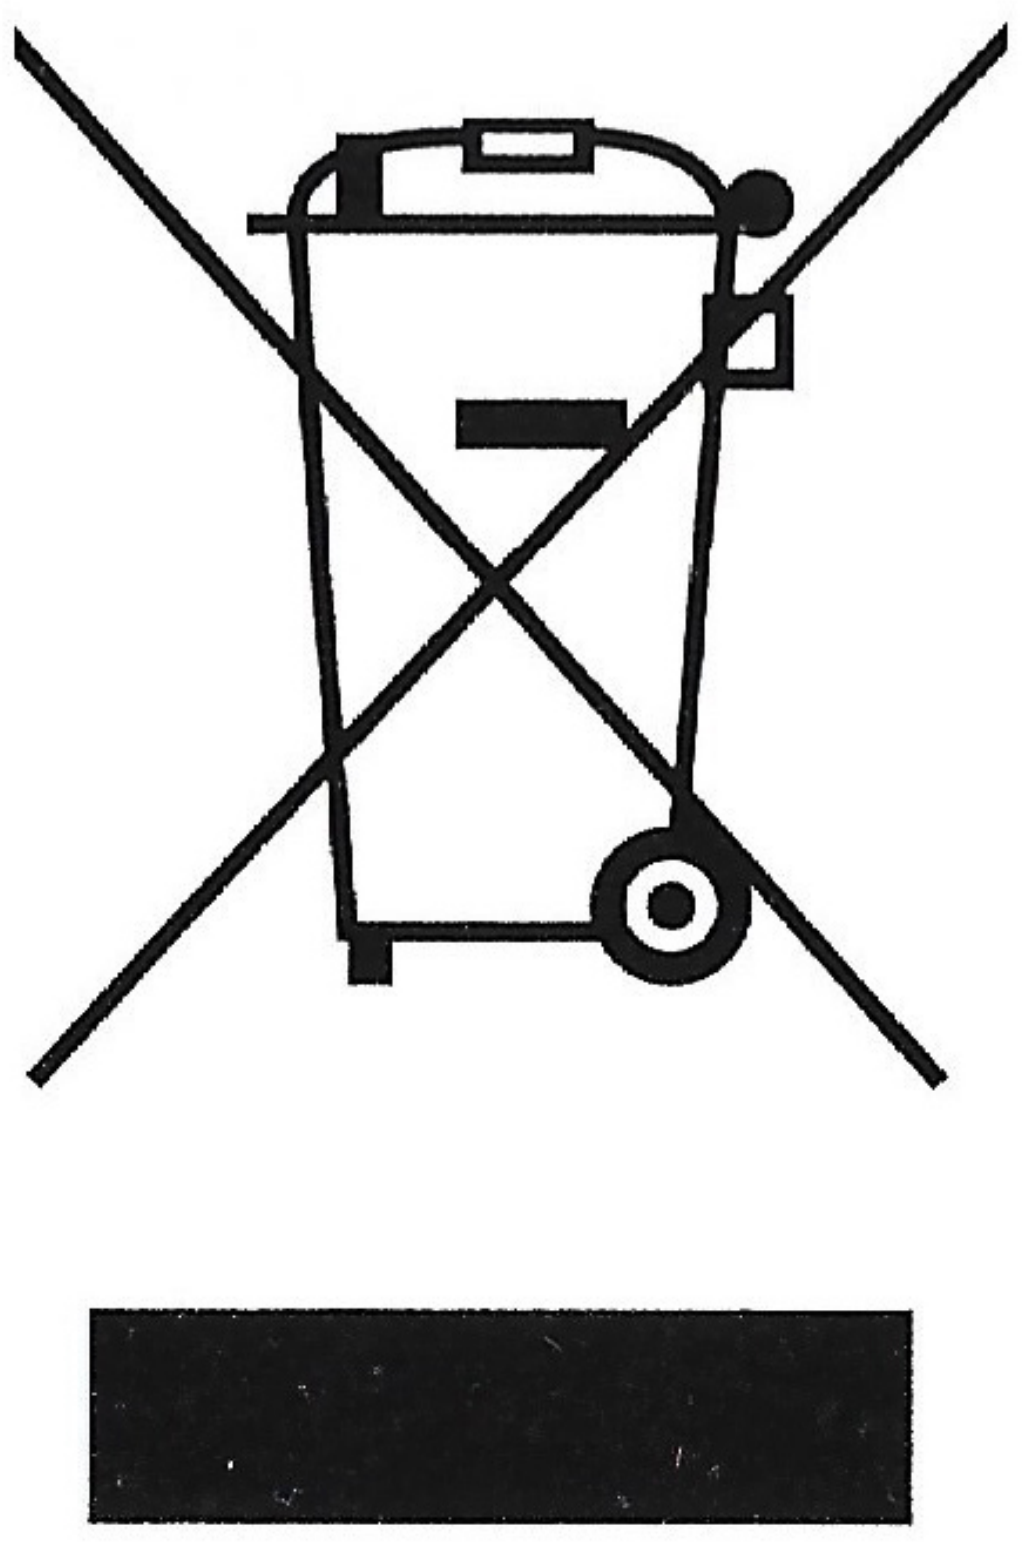

DIOYANO